




GBR

UHD 55VDU683B  
UHD 50VDU683B

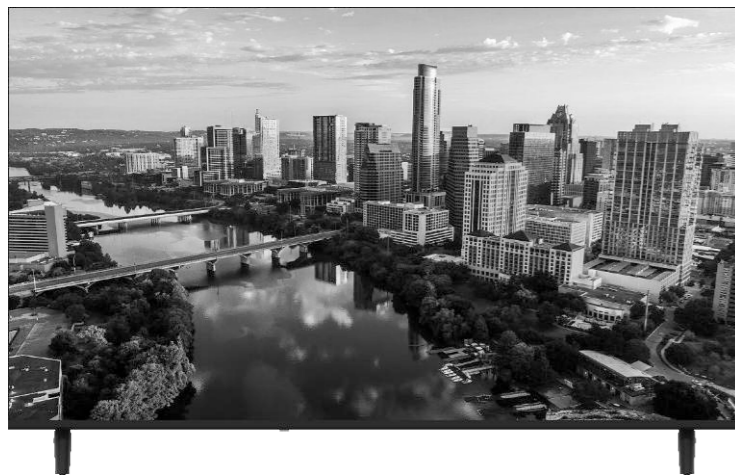

# Quick Start Guide

Please read this manual carefully before TV operation.  
Retain it for future reference.



Manufactured under license from Dolby Laboratories.  
Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



## Attach the Table Stands

How to assemble the stand


If you need to remove or assemble the stand please read the following instructions.

-Before attaching/detaching the stand, make sure to turn off the TV.

-Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.

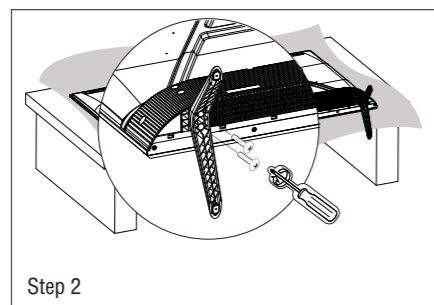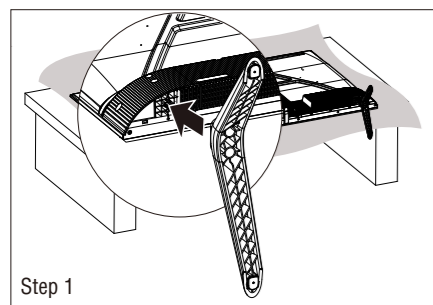

## Wallmounting Installation (optional)

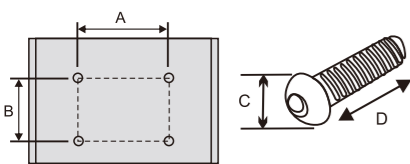


Inches	Specifications VESA (A*B)	Standard screw (C*D)	Quantity
50-55"	200 x 200 mm	M6*L10	4

Note: "D" is the effective length of the screw in the mounting hole.

Before installing the wall-mounted bracket, please screw the 4 wall-mounted adapter studs into the 4 wall-mounted nuts of the metal back.  
The figures and illustrations in this manual are provided for reference only and may differ from their actual appearance.

- Note:**
- 1.The bracket fixed on the wall is an optional part.
  2. When assembling the TV, there should be no other articles around it and please keep it distant from other articles.
  3. When assembling the TV, please ask the professional worker to fix it in order to avoid danger.
  4. The fixing picture is only for reference.
  5. Please follow the user's manual about bracket assemble to fix the TV.
  6. Attach the mounting bracket with the VESA compatible wall mounting kit.

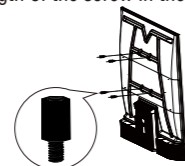

## PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Then, carefully follow the Instructions, heeding all Warnings.
3. Do Not remove the TV back cover or block the TV ventilation openings.
4. Do Not use the TV near water or a heat Source.
5. Do not pinch or cut the Power Cord.

### Note:

The product and illustrations in this Quick Start Guide is only for explanation purposes and may vary depending on model.

## WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
  - Only using furniture that can safely support the television set.
  - Ensuring the television set is not overhanging the edge of the supporting furniture.
  - Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
  - Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
  - Educating children about the dangers of climbing on furniture to reach the television set or its controls
- If your existing television set is being retained and relocated, the same considerations as above should be applied.

The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## What You Will Need for Set-up (Not Included)


- Head Screwdriver
- Internet Connection (Needed for Smart TV Streaming)
- Wireless Router (Needed for Smart TV Streaming)
- Computer, Tablet or Smart Phone (Needed for Smart TV Set-Up)

## Front panel

The buttons on the lower panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.



Remote Control Sensor

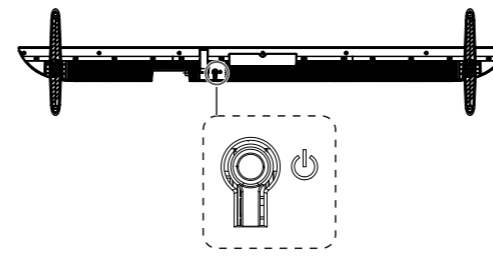

POWER (In the standby mode, press to turn on the TV. In the boot state, short press to shut down.)

## First Time use

When the TV is turned on for the first time after being shipped from the factory, initialization of the TV may take approximately several minutes, just following TV's guide to finish initialization.

### Connecting to the Internet

To get access to the Internet, using a wired connection or connecting to an available wireless network. It is recommended to use a modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, netmask, gateway, DNS Server 1 and DNS Server 2, so you do not have to enter them manually. Most home networks already have DHCP. Configure network settings to connect TV to an available network.

### Using External Devices

You can connect various external devices to the TV. The types and shapes of connectors available vary depending on your TV model. For the external device's connection, refer to "Connecting to the External Devices".

### Setup via Mobile Phone


When you turn on the TV for the first time, the TV will support setup via your smart device by scanning the QR code. If you scan the QR code to allow setup via the mobile app, setup of the TV will be more efficient. Before performing setup with the mobile app, please make sure your mobile device has Bluetooth activated. Note: The setup above is for referencing purpose and may differ depending on models/countries/regions.

## Unpack the TV and Accessories from the Carton Box

1. Please see the unpacking instructions on the top of the carton box (and below).
2. As noted, be careful not to grab or put pressure on the TV screen.
3. Check the carton box carefully for all included Accessories.



DO NOT

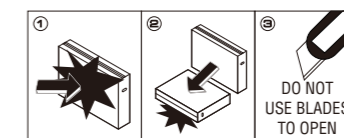


UNPACK WITH CARE

For 32" - 58"




UNPACK WITH CARE

For 65" - 75"

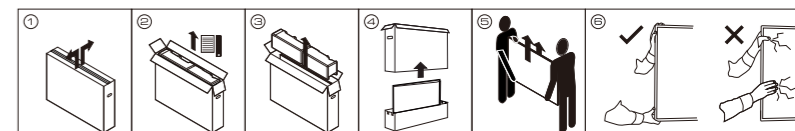

## Package Contents

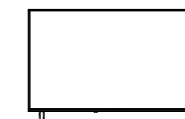

TV x 1pc



Quick Start Guide x 1pc



Remote Control x 1pc



Screws for Table Stands




AAA Batteries for Remote x 2 pcs




Table Stands x 2 pcs


## Connecting to the External Devices

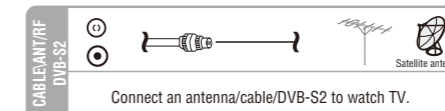


Connect an antenna/cable/DVB-S2 to watch TV.

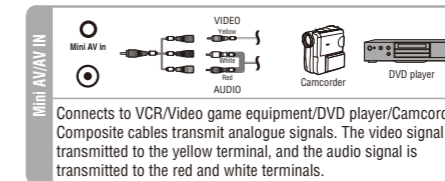


Connects to VCR/Video game equipment/DVD player/Camcorder. Composite cables transmit analogue signals. The video signal is transmitted to the yellow terminal, and the audio signal is transmitted to the red and white terminals.

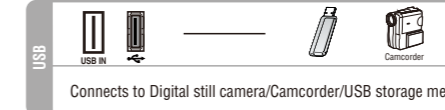


Connects to Digital still camera/Camcorder/USB storage media.

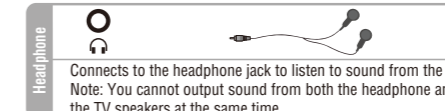


Connects to the headphone jack to listen to sound from the TV. Note: You cannot output sound from both the headphone and the TV speakers at the same time.

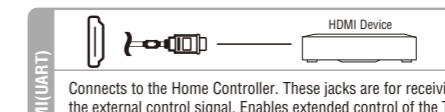


Connects to the Home Controller. These jacks are for receiving the external control signal. Enables extended control of the TV using RS-232C via the RS-232C and IR IN jacks. RS-232C: Connects to the RS-232C terminal of the home controller. IR IN: Connects to the IR out terminal of the home controller.

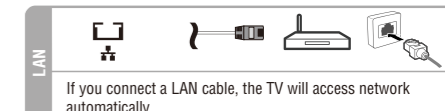


If you connect a LAN cable, the TV will access network automatically.

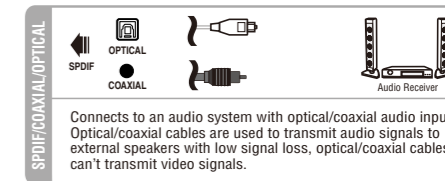


Connects to an audio system with optical/coaxial audio input. Optical/coaxial cables are used to transmit audio signals to external speakers with low signal loss, optical/coaxial cables can't transmit video signals.

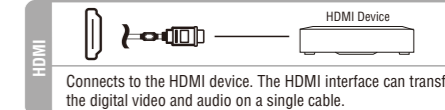

Connects to the HDMI device. The HDMI interface can transfer the digital video and audio on a single cable.

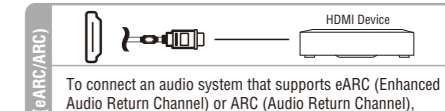

To connect an audio system that supports eARC (Enhanced Audio Return Channel) or ARC (Audio Return Channel), connect to the HDMI port labeled "eARC/ARC" on the TV. It is a feature that sends audio to an audio system that supports eARC/ARC through an HDMI cable.

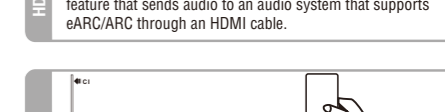


Insert a CI card.

## 7. Specifications

Model	UDL50TL684ANTS	UDG55TL684ANTS	
Display size	50" Diagonal (max.)	55" Diagonal (max.)	
LED panel resolution	3840x2160		
Speaker output power	≥5Wx2		
Power supply	110-240V~, 50/60Hz		
Power consumption	140W	150W	
Standby consumption	≤0.5W		
Antenna input	75 ohms		
Controller power	DC 3V (Two AAA size batteries)		
Dimensions (LxWxH)	TV with stand	1111x242.5x709.2mm	1226.2x240.9x774.7mm
	TV without stand	1111x78.2x640.4mm	1226.2x77.6x705.3mm
Weight (Net weight)	TV with stand	7.7kg	9.79kg
	TV without stand	7.6kg	9.68kg
Work temperature	0°C-40°C		


## 9. Prepare The Remote Control

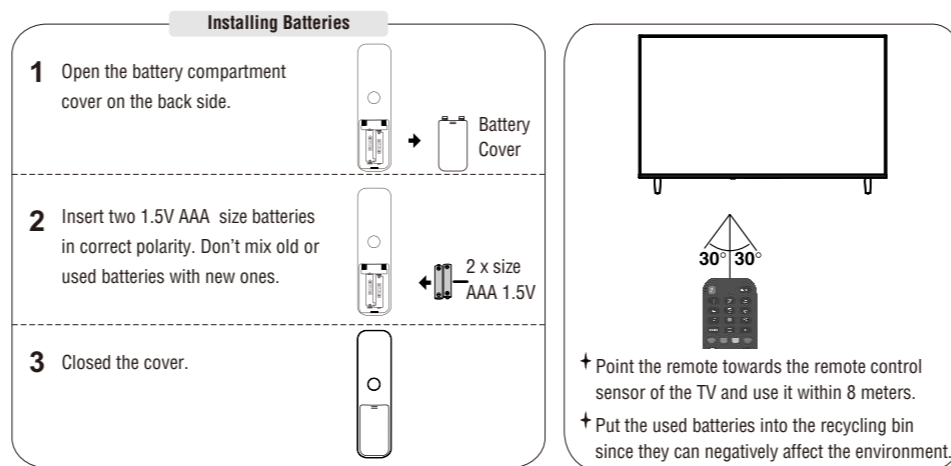

- Note:
- Batteries should last approximately one year under normal use (actual use will vary).
  - If the TV will remain inactive for an extended period of time, remove the batteries from the remote control to avoid possible damage due to leakage.
  - Do not mix old and new batteries or different types of batteries.
  - Do not throw batteries into fire or water.
  - The batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.

## Remote Buttons

- POWER:** Turn the TV on and off.
- INPUT:** Press this button to select the signal source.
- Number Buttons(0-9):** Directly select channel with digital buttons.
- Guide:** Select electronic program guide, in DTV mode, it will display all the information of program in a week when pressing this button.
- CH.LIST:** Displays program list.
- Color Buttons:** It's used in APPS.
- MENU :** Display the main menu or exit the current menu.
- Digital Media Player Control Buttons:** Play/Pause, please refer to relevant instructions in the section of multimedia player.
- Arrow Buttons (up/down/left/right):** Press the up, down, left or right button to scroll the menu and change menu item's value.
- OK:** Confirm selection.
- ↶ Returns to the previous screen.
- EXIT:** Exit the menu.
- HOME(🏠):** Press this button to display home page.
- VOL( + / - ):**  Press these buttons to adjust the volume.
- CH( ^ / v ):**  Press these buttons to change channel upward or downward.
- MUTE:** Press to cut off the sound of the TV set, press again to resume.
- SUBTITLE:** In USB mode, press this button to switch subtitles when movie is playing.
- TEXT:** Press to select the teletext mode. **Note:** Remote control may differ from the above figures depending on the product model and region.
- INFO:** Press to display current channel information.
- 🔍: You can press and hold the Edit button to re-customise.
- Streaming service buttons :** If network connects, press these keys to view video streaming service directly.

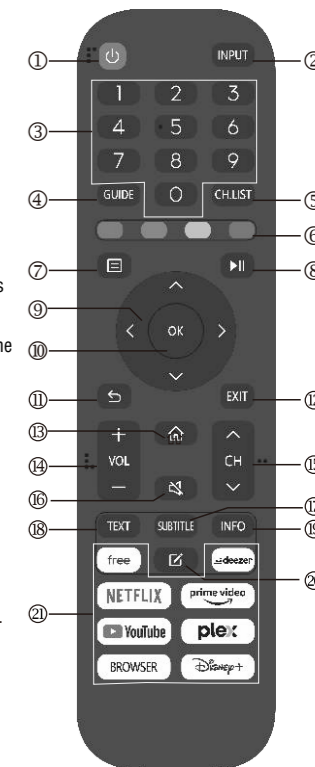

**Note:**  
Some buttons and services may not be provided depending upon models or regions.

## 10. SET-UP THE TV (Using the Remote Control)

View the embedded E-Manual that contains information about your TV's key features.

### Launch the E-Manual

Press **📖** button on your remote control and select Settings > Support > E-Manual.

Enter the Home screen of the E-Manual.

Press **INPUT** button on your remote control and select TV, then press **📖** button on your remote control and select E-Manual.

Enter Enjoy Live TV chapter to learn more about how to set up Live TV features.

Press **INPUT** button on your remote control and select Connection Guide.

Enter Connecting to External Devices chapter to learn more about how to connect external devices to your TV and how to set up.

- Note:**
- The black background icon indicates the button on the remote control.
  - The grey background icon indicates the icons on the TV screen for selecting.

### Home Screen

All TV functions can be accessed from the Home screen.

- Navigation bar
- Apps

**Note:** Indicators or icons may vary depending on models/countries/regions.



### Display the Home Screen

Press **📖** button on your remote control to enter the home screen. To exit the Home screen, press **INPUT** button on your remote control or use the navigation buttons to move the focus to the **📖** input icon on the top of the screen, press **OK** button to enter and select your desired input source.

### Use the Navigation Bar

The navigation bar refers to indicators and icons on the top of the Home screen.

- 🔍 Search:** Search the content you want.
- 📖 Input:** Select the input source depending on the device you have connected to your TV.
- ⚙️ Settings:** Manage TV configuration.
- 🔔 Notifications:** Allow pop-up notifications to appear for useful information and events that occur with your TV, including: **Advertising, New Arrivals, Warnings and Legal Statements, System Messages and Alexa Notification.** You can enable/disable each of these notifications at Settings in the notification centre. You can view the list of event messages generated by the TV.

### 👤 VIDAA Account

A VIDAA account provides all the best features of your Smart TV and ensures that all services are kept up to date. For more information about VIDAA account, please refer to Benefits of Smart TV > Using a VIDAA Account in E-manual.

### 🗣️ Voice

Quick access to Voice Service. For more information, please refer to Benefits of Smart TV > Voice Service in E-manual.

### 📖 Guide

Quick access to Guide. For more information, please refer to Enjoy Live TV > Programme Guide(EPG) in E-manual.

### 📺 Live TV

Quick access to Live TV. For more information, please refer to First-Time Use > Prepare Live TV in E-manual.

### 🕒 Time

You can always view the current time at the top of the Home screen.

### 🌐 Network

Connect your TV to the Internet through a wireless connection **📶** or an Ethernet cable **🔌**, and the corresponding icon will appear.

### Use the Shortcuts

You can add inputs, channels and websites to the Home screen, to have quick access to them for your convenience.

#### Add and remove inputs

- Press **INPUT** button.
- Move the focus to an input you want to add to the Home screen and press **📖** > **Add to home** > **OK**. The input icon will appear in Shortcuts on the Home screen.

#### Note:

Some options from the input source page cannot be added to the Home screen.

To remove the input from Shortcuts, move the focus to the shortcut, then press and hold the **OK** button on your remote control.

#### Add and remove channels

- In Live TV, press **OK** button to access the channel list.
- Press **📖** button and press **OK** button to pick channel that you would like to add on the Home screen.
- Select Add to home. The channel icon will appear in Shortcuts on the Home Screen.

#### Note:

To remove the channel from Shortcuts, move the focus to the shortcut, then press and hold the **OK** button on your remote control.

#### Add and remove webpages

- In Browser, visit a website you would like to add on the Home screen.
- Use the D-pad to move the focus to the **📖** Menu icon in the top of the Browser navigation bar and select Add to home.
- Select Add and this webpage will appear in the Shortcuts on the Home screen.

#### Note:

To remove webpages from Shortcuts, move the focus onto the shortcut page, then press and hold the **OK** button on your remote control.

## 11. Trouble Shooting

### Having trouble? Don't worry, it's usually an easy fix.

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.