



GBR

SRB

SL 706

SL 806

USER'S MANUAL VACUUM CLEANER
UPUTSTVO ZA UPOTREBU USISIVAČ



GBR

SL 706

SL 806

USER'S MANUAL VACUUM CLEANER



Before using your device for the first time, read this original instruction for use and the accompanying safety warnings. Act accordingly. Keep each user manual for later use or for forwarding to future users of the device.

General Information

Proper use

This vacuum cleaner is made for private household use and not for commercial use. The manufacturer assumes no liability for damage caused by improper use or misuse. Only use the vacuum cleaner with original spare parts, accessories or special accessories.

Disposal of Dust Filters

Dust filters are made of environmentally friendly materials. These items can be disposed of in the normal household waste, as long as they do not contain absorbed substances that are prohibited for household waste.

Spare Parts

Only use original accessories and original spare parts. In this way, you guarantee safe and trouble-free operation of the device.

For information on accessories and spare parts, contact your authorized dealer or service.

Scope of Delivery

The scope of delivery of your device is shown on its packaging. When the package is opened, check whether there are any missing parts inside.

Inform your dealer if accessories are missing or damaged in transport.

Warnings!

- ❖ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ❖ The appliance should not be cleaned and maintained by children without supervision.
- ❖ Keep packaging films out of reach of children.
- ❖ Children under 3 years of age should be kept away from the appliance unless they are constantly supervised.
- ❖ Devices should not be used for playing.
- ❖ Children older than 3 years old and younger than 8 years old should not plug the device into the electrical socket, should not adjust the device, and should not perform any action regarding the cleaning and maintenance of the device.
- ❖ The device should not be operated without supervision.
- ❖ Do not vacuum any inflammable or combustible materials such as cigarettes, ashes or charcoal, whether burning or extinguished.
- ❖ Do not vacuum any inflammable or explosive liquids or gases, as well as areas where such materials are stored.

Safety Instructions

- When using an electrical device, precautions should always be taken to avoid tire, electric shock and physical injury.
- Read carefully the Information given in the instruction manual. Please keep the instruction manual. If you pass the device on to a third party, hand over the manual along with it.
- Keep a floating bag of the device, accessories and equipment out of the reach of children and babies to avoid suffocation risk.
- If you have concerns about the device, housing, cable, plug and similar pieces, do not use the device. Contact the nearest authorized Service center.
- A malfunctioning device must be repaired by an authorized Service. Never attempt to repair or change any parts by yourself.
- Since the device is powered by electricity, there is a risk of electric shock, therefore never touch the plug with wet hands.
- When removing the plug from the socket, always pull the plug while holding it.
- Do not attempt to pull the plug while holding the power cord. This may cause damage to the cable. Avoid damaging the power cable and bringing it into contact with heat sources or sharp edges.
- Do not operate in outdoor areas. Your device may be adversely affected by dirt or rain. Keep your device away from water and protect it from rain or moisture.
- Do not vacuum up water, liquids or any other kind of wet material. Do not vacuum recently wiped or shampooed carpets or rugs until they are completely dry.
- Always operate your device within the voltage range indicated on it.
- Never leave your device unattended when it is plugged in. Children should be supervised to ensure that they do not play with the appliance.
- Always plug your device into a solid socket.
- Make sure the plug is not in the socket when attaching or removing accessories, or when cleaning and maintaining the device.
- Do not use the device with an extension cord.
- To protect the power cord from damage, avoid pinching, twisting or rubbing it against sharp edges.
- Do not point the tube, hose or any other accessory of the device at your eyes or ears and do not put them in your mouth.
- Never use gasoline, solvents, abrasive cleaning agents, metal objects or hard brushes to clean the device.
- Do not use appliances that release hot air such as hair dryers, stoves, etc. to dry the filters. Do not replace the filters until they are completely dry, otherwise, the smell of moisture may spread during operation, water may splash from the back and the filters may be damaged.
- Do not vacuum the toner dust used in printers and copiers, as it is electrically conductive.
- The crossed-out trash can sign indicates that you should never dispose of batteries and accumulators with household waste.


Troubleshooting

Before sending the product to the Authorized Service, you can use the table below to solve the problems.

Warning!

Before starting to solve the problem, turn off the device and pull out the mains plug. Never use the damaged product.

Problem	Possible Cause	Solution
The device does not work	The device is not plugged in or has not been switched on.	Plug in or start the device.
	There is no power flow in the socket.	Plug the vacuum cleaner into another socket that is working.
	The power cord is damaged.	Change the power cord by contacting an authorized Service center.
The device does not suck up dust.	The dust bag is full.	Clean the dust bag.
	The selected floorhead is not suitable for the surface.	Replace the floorhead with another one that is suitable for the surface.
	The filter is dirty.	Clean the filter. Ensure that the cyclone, Hepa, sponge and felt filters are clean.
	The hose, the telescopic tube or the unit is clogged.	Clear the obstruction. You can use a long stick for this if necessary.
The device is very loud during operation	Aspirated objects may be blocking the airway.	Clear the obstruction by removing the objects. You can use a long stick for this if necessary.

 If the dust bag is full, it should be cleaned out.

Important warning!

When the device overheats, turn off the device and pull out the mains plug. Make sure that the floorsweeper, telescopic suction tube, or vacuum hose are not clogged or that the filter does not need to be changed. After rectifying the fault, cool the device for at least 1 hour, then the device is ready for operation again.

Technical Specifications

Type		Value
Voltage	V	220-240
Electrical frequency	Hz	50/60
Protection class	class	II
Weight (without the accessories)	kg	4.9
Range of motion	m	7.5
Dust volume max	lt	2.5
Length	mm	429
Width	mm	318
Height	mm	279
Suction power	W	>180
Nominal power consumption	W	2000

The right to make technical changes is reserved.

Environmental Protection



The package of the product is made of recyclable materials. Please take the packaging material to reusable places instead of disposing of it in the household waste.



Old appliances contain valuable recyclable materials that must be recycled. Therefore, please dispose of used devices through official collection systems.

Electrical and electronic appliances often contain materials that, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. These components are required for the proper operation of the device. Devices that carry this sign must not be disposed of with household waste.

 
Usage Recommendations

- ❖ Never operate the device without the filter. This can damage the motor and reduce the life of your device.
- ❖ Always clean all of the parts as specified in the instruction manual. Do not clean any of the parts with water and/or cleaning agents unless specifically indicated in the instruction manual.
- ❖ This vacuum cleaner is not suitable for:
 - Use on people or animals
 - Use to absorb
 - Small creatures (e.g. insects, spiders, etc.)
 - Substances that are hazardous to health, sharp-edged, hot or burning materials.
 - Wet or liquid substances
 - Highly flammable or explosive substances and gases

Attention!

- ☒ If you use water to wash your device's washable filters, make sure they are completely dry before putting them back in the device.
- ☒ Do not dry the filter in direct sunlight, on a radiator or in a clothes dryer. Replace the washable filter if it cannot be cleaned properly or if it is damaged.

Overview and Parts Description

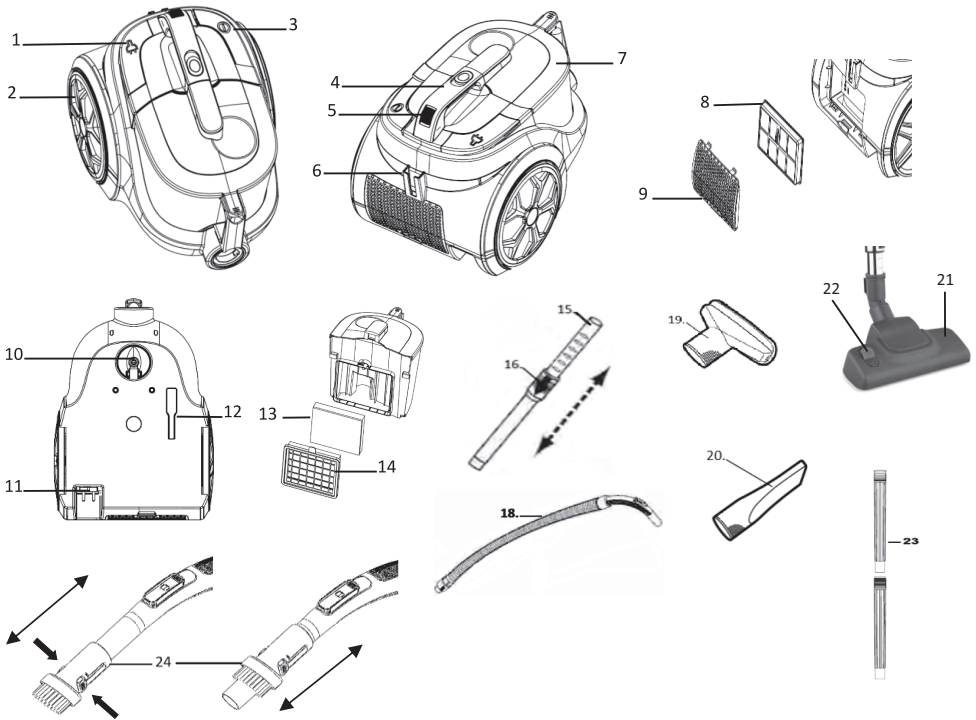


1. Power cable winding button
2. Rear wheel
3. On/Off switch
4. Carrying handle
5. Suction power adjustment knob (only on certain models)
6. Horizontal parking channel
7. Dust container
8. HEPA filter
9. Air outlet cover
10. Swivel wheel
11. Plug
12. Upright parking channel

13. Sponge and felt filter
14. Dust bag filter cartridge
15. Telescopic tube
16. Telescopic tube adjustment latch
17. Dust container
18. Hose
19. Upholstery nozzle
20. Narrow crevice tool
21. Floor head
22. Adjusting the floorhead type
23. Plastic tube
24. Movable brush head (optional)


Use of the Device

 Attaching the hose

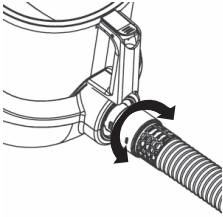


- 1- The hose end is pushed into the hose port and locked by turning it to the right.
- 2- The hose end is turned to the left and removed by pulling back.

 Adjusting the suction power of the handle

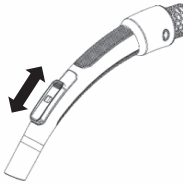


- 1- Suction power is adjusted from the suction power adjustment knob:
 - Suction power adjustment knob on, low suction power
 - Suction power adjustment knob off, high suction power

 Attaching the telescopic tube to the handle




- 1- Attach the handle and telescopic tube together and lock in place by pressing firmly.

 Plastic tube



- 1- Connect the plastic tubes together.
- 2- Attach the handle and the plastic tube together and lock them in place by pressing firmly.

 Telescopic tube adjustment latch



- 1- Adjust the telescopic tube to the desired length by pressing the telescopic tube adjustment knob.

Attaching the tools to the telescopic tube



- 1- Attach the floorhead, the narrow crevice tool, upholstery nozzle and the telescopic tube together and lock them in place by pressing firmly.
- 2- Narrow crevice tool: Suitable for cleaning of the corners, narrow places and warm air heating unit, etc.
- 3- Upholstery nozzle: Suitable for cleaning your seats and sensitive surfaces as well as a dusting of your cushions, etc.

Adjusting the floorhead type



 
- 1- Carpets and rugs




- 2- Hard surfaces

When the device does not work

When not in use, you can place the floorhead, tubes and hose horizontally or in an upright parking position.

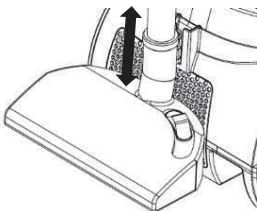


- 1- Horizontal parking

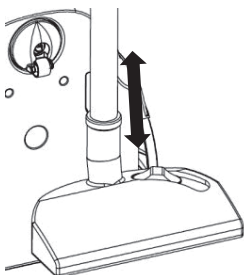 


- 2- Upright parking

 Operating the device

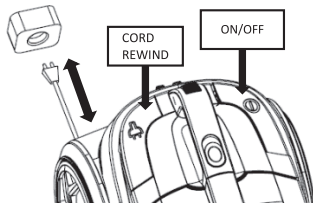


- 1 - Pull the power cord from the device and plug it into the socket.
- 2 - To start the device, press the on/off button on top of the device.
- 3 - To turn the device off, press the on/off button on top of the device and pull the power plug out of the socket.
- 4 - Press the automatic cord rewind button to rewind the power cord.

 Adjusting the suction power (On power adjustable models)

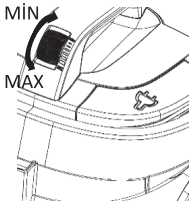

- 1- You can adjust the suction power of the device by turning the suction power button located on the body of the device.
- Use maximum suction power when cleaning heavily soiled carpets and hard floors.
 - Use minimum suction power when cleaning curtains, tablecloths, etc.

 Removal of the dust bag

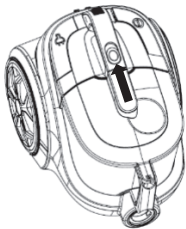


- 1- Push the dust bag cover latch forward and pull the dust bag up to remove it.
- 2- Empty the dust bag.

Tip: It is recommended to clean the filters every time you replace or empty the bag.


ATTENTION!

 Don't forget to attach the dust bag filter cartridge.

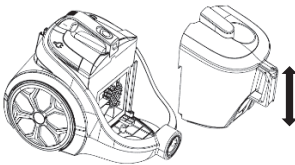

- 5-Place the dust bag in its place.

 Cleaning of the dust bag

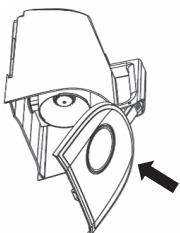

- 1- Hold the dust bag over the trash can and press the lid handle on the dust bag.

 
Note: Always empty the dust bag when the dust level reaches the MAX sign.

- 2- When the dust bag is empty, close the lid, ensure that the lid is positioned correctly.

- 3- Push the dust bag into the device and lock it.

Note: Always verify that the dust container is correctly positioned when putting it in.

Cleaning of the dust bag filter cartridge

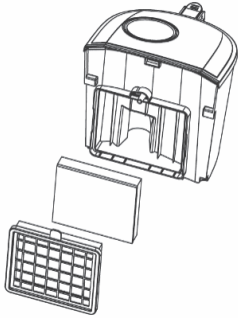


- 1- Remove the dust bag filter cartridge, take out the sponge and felt filters.
- 2- Clean the sponge and felt filters.

Attention!

- Never clean the sponge and felt filters in the washing machine and never dry them with a hair dryer.
- Do not wash the pieces with cleaning agents or with hot water.
- Wait for the sponge and felt filters and dust bag to dry completely (at least 24 hours) before putting them back in the device.

- When putting back the motor protection filter, place the white felt filter first, then the black sponge on the filter cartridge.

 Cleaning of the Hepa filter

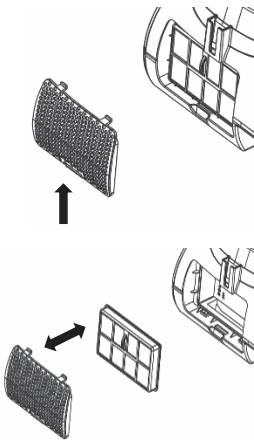

1- Open and remove the filter cover by pressing the filter cover latch.

2- Remove the Hepa filter.

3- Empty the Hepa filter into a trash can to clean it.

NOTE: Do not wash the Hepa filter.

4- Place the clean filter into the filter case.

5- Close the filter cover.



SRB

SL 706

SL 806

UPUTSTVO ZA UPOTREBU USISIVAČ



Pre prve upotrebe uređaja, najpre pročitajte ovo uputstvo za upotrebu i prateća bezbednosna upozorenja. Postupajte u skladu sa uputstvom. Sačuvajte svako uputstvo za upotrebu za kasniju upotrebu ili za prosleđivanje budućim korisnicima uređaja.

Opšte informacije

Pravilna upotreba

Ovaj usisivač je napravljen za upotrebu u privatnom domaćinstvu, a ne za komercijalnu upotrebu. Proizvođač ne preuzima nikakvu odgovornost za štetu uzrokovanu nepravilnom ili pogrešnom upotrebom. Koristite usisivač samo sa originalnim rezervnim delovima, priborom ili posebnim priborom.

Odlaganje filtera za prašinu

Filteri za prašinu su napravljeni od ekološki prihvatljivih materijala. Ovi predmeti se mogu odlagati uz uobičajeni kućni otpad, sve dok ne sadrže apsorbovane supstance koje su zabranjene za kućni otpad.

Rezervni delovi

Koristite samo originalni pribor i originalne rezervne delove. Na ovaj način garantujete bezbedan i nesmetan rad uređaja.

Za informacije o dodacima i rezervnim delovima, obratite se svom ovlašćenom prodavcu ili servisu.

Obim isporuke

Obim isporuke vašeg uređaja je prikazan na njegovom pakovanju. Kada se pakovanje otvori, proverite da li unutra ima delova koji nedostaju.

Obavestite svog prodavca ako dodatna oprema nedostaje ili je oštećena u transportu.

Upozorenja!

- ❖ Ovaj uređaj mogu da koriste deca uzrasta od 8 godina i više i osobe sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima ili sa nedostatkom iskustva i znanja ako su pod nadzorom ili su dobili instrukcije u vezi sa korišćenjem uređaja na bezbedan način i razumeju uključene opasnosti.
- ❖ Aparat ne treba da čiste i održavaju deca bez nadzora.
- ❖ Čuvajte folije za pakovanje dalje od dece.
- ❖ Decu mlađu od 3 godine treba držati dalje od uređaja osim ako su pod stalnim nadzorom.
- ❖ Uređaji ne bi trebalo da se koriste za igranje.
- ❖ Deca starija od 3 godine i mlađa od 8 godina ne bi trebalo da priključuju uređaj u električnu utičnicu, ne bi trebalo da podešavaju uređaj i ne bi trebalo da preduzimaju nikakve radnje u vezi sa čišćenjem i održavanjem uređaja.
- ❖ Uređaj ne sme da se koristi bez nadzora.
- ❖ Ne usisavajte zapaljive materijale kao što su cigarete, pepeo ili ugulj, bilo da su zapaljeni ili ugašeni.
- ❖ Nemojte usisavati nikakve zapaljive ili eksplozivne tečnosti ili gasove, kao ni prostore u kojima se takvi materijali čuvaju.

Bezbednosna upozorenja

- Kada koristite električni uređaj, uvek treba da preduzmete mere predostrožnosti da sprečite požar, strujni udar i telesne povrede.
- Pažljivo pročitajte informacije date u uputstvima za upotrebu. Sačuvajte uputstva za upotrebu. Ako ćete uređaj dati trećoj strani, obavezno dajte uputstvo uz njega.
- Zaštitne kese uređaja, pribora i aparata držite dalje od dece i beba kako biste sprečili rizik od gušenja.
- Ako mislite da postoji bilo kakav problem na uređaju, kućištu, kablju, utikaču i sličnim delovima, nemojte da koristite uređaj. Obratite se najbližem ovlašćenom servisu.
- Ako je uređaj neispravan, trebalo bi da ga popravi ovlašćeni servis. Nikada ga ne popravljajte sami.
- Pošto se uređaj napaja električnom energijom, postoji opasnost od strujnog udara, zato nikada ne dodirujte utikač mokrim rukama.
- Kada želite da izvučete utikač iz utičnice, obavezno povucite utikač držeći ga.
- Ne pokušavajte da vučete držeći kabl za napajanje, to može oštetiti kabl. Vodite računa da ne oštetite kabl za napajanje i da ne dođete u kontakt sa izvorom toplote ili oštrim ivicama.
- Ne koristite na otvorenom. Prljavnost ili kiša mogu negativno da utiču na uređaj.
- Nikada ne uranjajte mašinu u vodu i zaštitite je od kiše ili vlage.
- Ne usisavajte vodu, tečnosti ili bilo koju drugu vrstu vlažnog materijala. Ne usisavajte nedavno obrisane ili oprane tepihe ili tepihe dok se potpuno ne osuše.
- Uverite se da koristite uređaj u opsegu napona koji je napisan na uređaju.
- Nikada ne ostavljajte uređaj bez nadzora dok je uključen. Ne dozvolite deci da se igraju sa uređajem bez vašeg nadzora.
- Uvek koristite svoj uređaj u bezbednoj utičnici.
- Uverite se da utikač nije u utičnici kada priključujete ili uklanjate pribor, ili kada čistite i održavate uređaj.
- Nemojte koristiti uređaj sa produžnim kablom.
- Da biste sprečili oštećenje kabla za napajanje, nemojte ga pritiskati, savijati ili trljati o oštre ivice.
- Nemojte da držite cev, crevo ili bilo koji drugi pribor uređaja u očima ili ušima niti ga stavljati u usta.
- Nikada ne koristite benzin, rastvarače, abrazivna sredstva za čišćenje, metalne predmete ili tvrde četke za čišćenje uređaja.
- Nemojte koristiti uređaje koji ispuštaju vrući vazduh, kao što su fen za kosu, šporeti, itd. za sušenje filtera. Nemojte menjati filtere dok se potpuno ne osuše, inače se miris vlage može proširiti tokom rada, voda može prskati i filteri se mogu oštetiti.
- Ne usisavajte prašinu od tonera koja se koristi u štampačima i fotokopir aparatima, jer je električno provodljiva.
- Znak precrtane kante za otpatke ukazuje na to da nikada ne treba da odlažete baterije i akumulatore sa kućnim otpadom.

Rešavanje problema

Pre nego što pošaljete proizvod ovlašćenom servisu, možete koristiti tabelu ispod da biste rešili probleme.

Upozorenje!

Pre nego što počnete sa rešavanjem problema, isključite uređaj i izvucite mrežni utikač. Nikada ne koristite oštećeni proizvod.

Problem	Mogući uzrok	Rešenje
Uređaj ne radi	Uređaj nije uključen ili nije pokrenut.	Uključite i pokrenite uređaj.
	Ne postoji struja koja teče kroz utičnicu.	Povežite usisivač u drugu utičnicu za koju ste sigurni da je ispravna.
	Kabl je oštećen.	Zamenite kabl u Ovlašćenom servisu.
Uređaj ne usisava	Kesa za prašinu je puna.	Očistite kesu za prašinu.
	Izabrani čistač nije pogodan za datu površinu	Zamenite dodatak za čišćenje onim pogodnim za datu površinu.
	Filter je prljav.	Očistite filter. Uverite se da su ciklon, Hepa, sunđerasti i filc filter čisti.
	Crevo, teleskopska cev ili dodatak je začepljen.	Očistite blokadu. Za ovo možete koristiti dugački štap ako je potrebno.
Uređaj pravi veliku buku tokom rada	Usisani predmeti mogu blokirati usisne puteve.	Uklonite blokadu uklanjanjem predmeta. Za ovo možete koristiti dugački štap ako je potrebno.

 Ako je kesa za prašinu puna, treba je očistiti.

Važno upozorenje!

Kada se uređaj pregreje, isključite uređaj i izvucite mrežni utikač. Uverite se da čistač poda, teleskopska usisna cev ili usisno crevo nisu začepljeni ili da filter ne treba menjati. Nakon otklanjanja kvara, ohladite uređaj najmanje 1 sat, kada je uređaj ponovo spreman za rad.

Tehničke specifikacije

Tip	Vrednost	
Napon	V	220-240
Električna frekvencija	Hz	50/60
Klasa zaštite	klasa	II
Težina (bez dodataka)		
Opseg kretanja	m	7.5
Zapremina prašine max	l	2.5
Dužina	mm	429
Širina	mm	318
Visina	mm	279
Snaga usisavanja	W	>180
Nominalna potrošnja energije		

Pravo na tehničke izmene je zadržano.

Zaštita životne sredine



Pakovanje proizvoda je napravljeno od materijala koji se mogu reciklirati. Molimo, odnesite ambalažni materijal na mesta za reciklažu umesto da se odlaže u kućni otpad.



Stari uređaji sadrže vredne materijale koji se mogu reciklirati i koje treba reciklirati. Stoga vas molimo da odložite korišćene uređaje preko službenih sistema za prikupljanje.

Električni i elektronski uređaji često sadrže materijale koji, ako se njima rukuje ili odlažu na pogrešan način, mogu biti potencijalno opasni po ljudsko zdravlje i životnu sredinu. Ove komponente su neophodne za pravilan rad uređaja. Uređaji koji sadrže ovaj znak ne smeju se odlagati sa kućnim otpadom.

 
Preporuke za upotrebu

- ❖ Nikada nemojte koristiti uređaj bez filtera. Ovo može oštetiti motor i smanjiti životni vek vašeg uređaja.
- ❖ Uvek čistite sve delove kako je navedeno u uputstvu za upotrebu. Ne čistite nijedan deo vodom i/ili sredstvima za čišćenje osim ako nije izričito navedeno u uputstvu za upotrebu.
- ❖ Ovaj usisivač nije pogodan za:
 - upotrebu na ljudima ili životinjama
 - usisavanje:
 - malih stvorenja (npr. insekti, pauci, itd.)
 - supstance koje su opasne po zdravlje, materijale oštrih ivica, vruće ili zapaljene.
 - vlažne ili tečne supstance
 - lako zapaljive ili eksplozivne supstance i gasove

Pažnja!

- ☒ Ako koristite vodu za pranje perivih filtera uređaja, uverite se da su potpuno suvi pre nego što ih vratite u uređaj.
- ☒ Nemojte sušiti filter na direktnoj sunčevoj svetlosti, na radijatoru ili u mašini za sušenje veša. Zamenite perivi filter ako se ne može pravilno očistiti ili ako je oštećen.

Pregled i opis delova

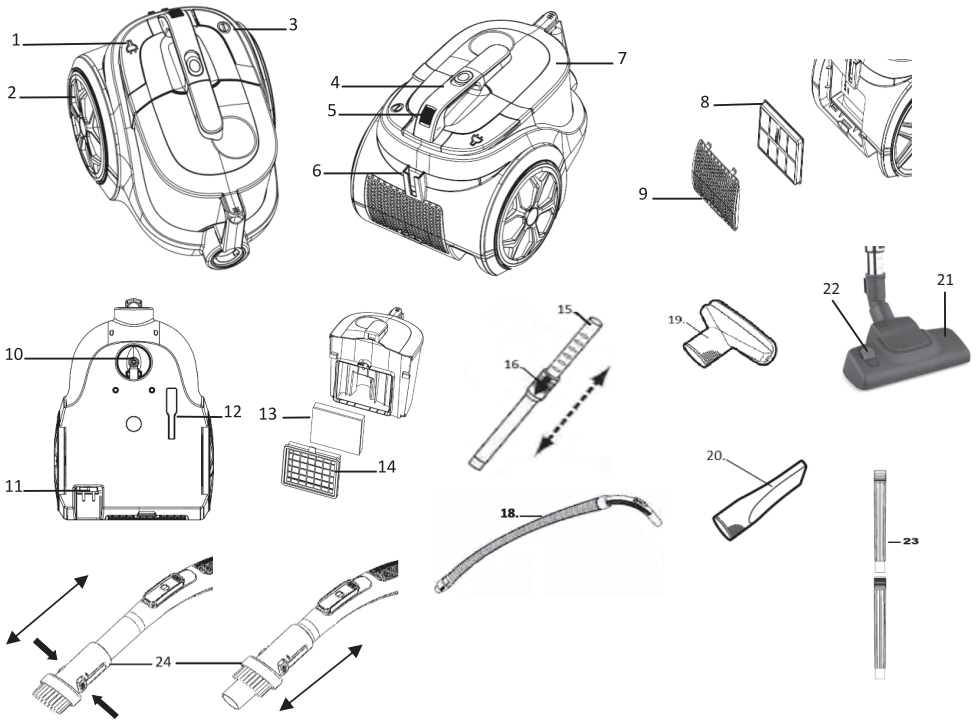


1. Dugme za namotavanje kabla za napajanje
2. Zadnji točak
3. Prekidač za uključivanje/isključivanje
4. Ručka za nošenje
5. Dugme za podešavanje snage usisavanja (samo na određenim modelima)
6. Horizontalni kanal za parkiranje
7. Posuda za prašinu
8. HEPA filter
9. Poklopac za izlaz vazduha
10. Okretni točak
11. Utikač
12. Uspravni kanal za parkiranje

13. Sunde i filter od filca
14. Uložak filtera za kesu za prašinu
15. Teleskopska cev
16. Jezičak za podešavanje teleskopske cevi
17. Posuda za prašinu
18. Crevo
19. Mlaznica za tapaciranje
20. Alat za uske otvore
21. Podna glava za usisavanje
22. Podešavanje tipa podne glave
23. Plastična cev
24. Pokretna glava četke (opciono)


Upotreba uređaja

 Pričvršćivanje creva

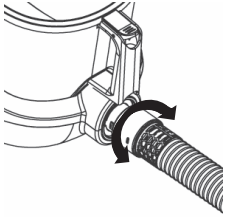


- 1- Kraj creva se gura u otvor za crevo i zaključava okretanjem udesno.
- 2- Kraj creva se okreće ulevo i uklanja povlačenjem unazad.

 Podešavanje usisne snage pomoću ručke

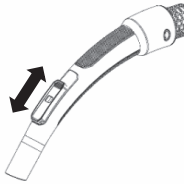


- 1- Snaga usisavanja se podešava pomoću dugmeta za podešavanje snage usisavanja:
 - Dugme za podešavanje snage usisavanja uključeno, niska snaga usisavanja
 - Dugme za podešavanje snage usisavanja isključeno, velika snaga usisavanja

 Pričvršćivanje teleskopske cevi na ručku




- 1- Pričvrstite ručku i teleskopsku cev zajedno i učvrstite ih čvrstim pritiskom.

 Plastična cev



- 1- Povežite plastične cevi zajedno.
- 2- Pričvrstite ručku i plastičnu cev zajedno i učvrstite ih čvrstim pritiskom.

 Jezičak za podešavanje teleskopske cevi



- 1- Podesite teleskopsku cev na željenu dužinu pritiskom na dugme za podešavanje teleskopske cevi.

Pričvršćivanje dodatka na teleskopsku cev



- 1- Pričvrstite podnu glavu, alat za uske otvore, mlaznicu za tapaciranje i teleskopsku cev zajedno i učvrstite ih čvrstim pritiskom.
- 2- Dodatak za uske otvore: Pogodan za čišćenje uglova, uskih mesta i jedinice za grejanje toplog vazduha itd.
- 3- Mlaznica za tapaciranje: Pogodna za čišćenje vaših sedišta i osetljivih površina, kao i za brisanje prašine sa vaših jastuka itd.

Podešavanje tipa podne glave



 
- 1- Tepisi i ćilimi




- 2- Tvrde površine

Kada se uređaj ne koristi

Kada nisu u upotrebi, možete postaviti podnu glavu, cevi i crevo horizontalno ili u uspravan položaj za parkiranje.

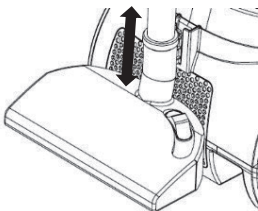


- 1- Horizontalno parkiranje

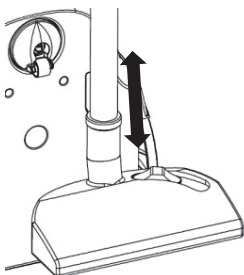 


- 2- Uspravno parkiranje

 Rukovanje uređajem

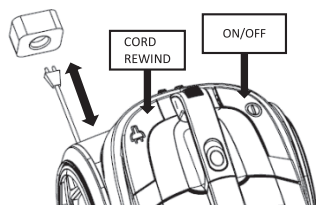

- 1 - Izvucite kabl za napajanje iz uređaja i uključite ga u utičnicu.
- 2 - Da biste pokrenuli uređaj, pritisnite dugme za uključivanje/isključivanje na vrhu uređaja.
- 3 - Isključite uređaj, pritisnite dugme za uključivanje/isključivanje na vrhu uređaja i izvucite utikač iz utičnice.
- 4 - Pritisnite dugme za automatsko namotavanje kabla da namotate kabl za napajanje.

 Podešavanje snage usisavanja (na modelima sa podesivom snagom)

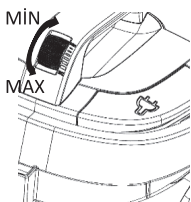

- 1- Možete podesiti snagu usisavanja uređaja okretanjem dugmeta za snagu usisavanja koji se nalazi na telu uređaja.
- Koristite maksimalnu snagu usisavanja kada čistite jako zaprljane tepihe i tvrde podove.
- Koristite minimalnu snagu usisavanja kada čistite zavese, stolnjake itd.

Uklanjanje kese za prašinu

 


- 1- Gurnite jezičak poklopca kese za prašinu napred i povucite kesu nagore da biste je uklonili.
- 2- Ispraznite kesu za prašinu.

Savet: Preporučuje se čišćenje filtera svaki put kada menjate ili praznite kesu.


PAŽNJA!

Ne zaboravite da pričvrstite uložak filtera kese za prašinu.

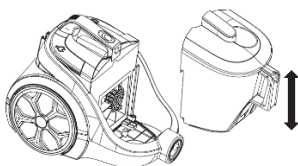

- 5- Postavite kesu za prašinu na njeno mesto.

 Čišćenje kese za prašinu

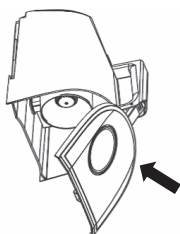

- 1- Držite kesu za prašinu iznad kante za smeće i pritisnite ručku poklopca na kesu za prašinu.

 
Napomena: Uvek ispraznite kesu za prašinu kada nivo prašine dostigne znak MAX.

- 2- Kada je kesu za prašinu prazna, zatvorite poklopac i uverite se da je poklopac pravilno postavljen.

- 3- Ubacite kesu za prašinu u uređaj i zaključajte uređaj.

Napomena: Uvek proverite da li je posuda za prašinu pravilno postavljena kada je stavljate.

Čišćenje uložka filtera kese za prašinu

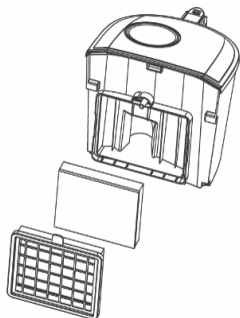


- 1- Uklonite uložak filter kese za prašinu, izvadite sunder i filtere od filca.
- 2- Očistite sunder i filtere od filca.

Pažnja!

- Nikada ne čistite sunder i filtere od filca u mašini za pranje veša i nikada ih ne sušite fenom.
- Nemojte prati delove sredstvima za čišćenje ili toplom vodom.
- Sačekajte da se sunder i filteri od filca i kesa za prašinu potpuno osuše (najmanje 24 sata) pre nego što ih vratite u uređaj.

Kada vraćate filter za zaštitu motora, prvo postavite beli filter od filca, a zatim crni sunder na uložak filtera.

 Čišćenje Hepa filtera

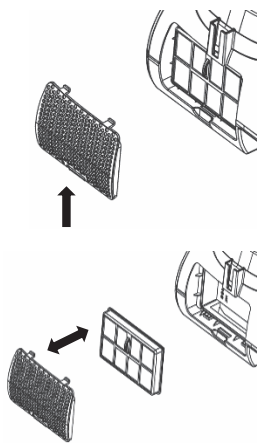

- 1- Otvorite i uklonite poklopac filtera pritiskom na jezičak poklopca filtera.
 - 2- Uklonite Hepa filter.
 - 3- Ispraznite Hepa filter u kantu za smeće da biste ga očistili.
- NAPOMENA:** Ne perite Hepa filter.
- 4- Stavite čisti filter u kućište filtera.
 - 5- Zatvorite poklopac filtera.

