



GBR

SRB

SL 402

SL 405

USER'S MANUAL WATER FILTERED VACUUM CLEANER
UPUTSTVO ZA UPOTREBU USISIVAČ SA VODENIM FILTEROM



GBR

SL 402

SL 405

USER'S MANUAL WATER FILTERED VACUUM CLEANER



Before using your device for the first time, read this original instruction for use and the accompanying safety warnings. Act accordingly. Keep each user manual for later use or for forwarding to future users of the device.

General Information

Proper use

This vacuum cleaner is made for private household use and not for commercial use. The manufacturer assumes no liability for damage caused by improper use or misuse. Only use the vacuum cleaner with original spare parts, accessories or special accessories.

Disposal of Dust Filters

Dust filters are made of environmentally friendly materials. These items can be disposed of in the normal household waste, as long as they do not contain absorbed substances that are prohibited for household waste.

Spare Parts

Only use original accessories and original spare parts. In this way, you guarantee safe and trouble-free operation of the device.

For information on accessories and spare parts, contact your authorized dealer or service.

Scope of Delivery

The scope of delivery of your device is shown on its packaging. When the package is opened, check whether there are any missing parts inside.

Inform your dealer if accessories are missing or damaged in transport.

WARNINGS

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. The appliance should not be cleaned and maintained by children without supervision.
- Keep packaging films away from children.
- Children under 3 years of age should be kept away from the appliance unless they are constantly supervised.
- The devices should not be used for playing.
- Children older than 3 years old and younger than 8 years old should not plug the device into the electrical socket, should not adjust the device, and should not perform any action regarding the cleaning and maintenance of the device.
- The device must not be used unsupervised.

SAFETY WARNINGS!

- When using an electrical device, precautions should always be taken to prevent fire, electric shock, and personal injury.
- Carefully read the information given to you in the instructions for use. Please keep the instructions for use. If you are going to give the device to a third party, be sure to give the manual along with it.
- Keep the protective bags of the device, accessories and apparatus away from children and babies to prevent the risk of suffocation.
- If you think that there is any problem on the device, case, cable, plug and similar parts, do not operate the device. Contact your nearest authorized Service.
- If the device is faulty, it should be repaired by the authorized Service. Never repair it by yourself.

- Since the device is powered by electricity, there is a danger of electric shock, so never touch the plug with wet hands.
- When you want to pull the plug from the socket, be sure to pull the plug by holding it.
- Do not try to pull by holding the power cord, it may damage the cable.
- Take care not to damage the power cord, and not to come into contact with the heat source or sharp points.
- Do not use outdoors. Your machine may be adversely affected by dirt or rain.
- Never immerse your machine in water and protect it from rain or moisture.
- Be sure to use your machine within the voltage range written on the device.
- Never leave your machine unattended while it is plugged in. Do not allow children to play with the appliance without your supervision.
- Always use your device in a safe socket.
- Make sure that the plug is not in the socket when attaching or removing accessories, or when cleaning and maintaining the device.
- Do not use the device with an extension cord.
- To prevent the power cord from being damaged, do not pinch, bend or rub it against sharp edges.
- Do not hold the tube, hose or any other accessory of the device in your eyes or ears or put it in your mouth.

Troubleshooting

Before sending the product to the Authorized Service, you can use the table below to solve the problems.

WARNING!

Before starting to solve the problem, turn off the device and pull out the mains plug. Never use the damaged product.

Trouble	Possible Cause	Solution
When the machine is not working	It is not plugged in or the machine has not been started.	Plug in or start the machine.
	There is no current flowing through the socket.	Connect the vacuum cleaner to another socket that you are sure is current.
	The cable is damaged.	Change the cable from the Authorized Service.
When the machine does not clean	The dust container is full.	Empty the dust container.
	The selected sweeper is not suitable for the surface.	Replace the sweeper with the one suitable for the surface.
	The filter is dirty.	Clean the relevant filter. Make sure the cloth filter is clean.
	The hose, vacuum tube or apparatus is clogged.	You clear the blockage. You can use a long board for this if needed.
If the machine makes a lot of noise during operation	Extracted objects may be blocking the airway.	Remove the blockage by removing the objects. You can use a long board for this if needed.
Liquid or foam leakage is present	Turn off the device and unplug.	Empty the dust container and, if necessary, use antifoam. Before starting the device, check whether the float is working or not.



If the dust container is full, be sure to empty it.

Important warning!

When the device overheats, turn off the device and pull out the mains plug. Make sure that the floorsweeper, telescopic suction tube, or vacuum hose are not clogged or that the filter does not need to be changed. After rectifying the fault, cool the device for at least 1 hour, then the device is ready for operation again.

ENVIRONMENTAL PROTECTION



Packaging materials can be recycled. Please send the packaging materials to reusable places instead of throwing them in your household rubbish.



Old appliances contain valuable recycling materials that need to be recycled. For this reason, please dispose of used goods using the designated collection systems.

Electrical and electronic equipment often contain components that can be hazardous to human health and the environment if misused or disposed of incorrectly. These components must be present in order for the device to operate properly. Devices marked with this symbol must not be disposed of with household waste.

USAGE RECOMMENDATIONS

- Never use the device without any filter. This can cause engine damage and reduce the life of the device.
- Always clean all parts as shown in the instructions for use. Do not clean any part with water and/or cleaning agents unless it is specifically indicated in the instructions for use.
 - The Vacuum Cleaner is not suitable for:
 - Vacuum cleaning of people and animals.
 - Sweeping the following:
 - Small creatures (eg insects, spiders, etc.)
 - Substances that are hazardous to health, have sharp edges, are hot or are on fire.
 - Moist or liquid substances
 - Easily flammable or explosive substances and gases.

 
 
ATTENTION!

- If you are cleaning the washable filters of your device with water, make sure that they are completely dry before putting them back into the device.
- Do not dry the filter in direct sunlight, on a radiator or in a tumble dryer. Replace the washable filter when it cannot be cleaned properly or if it is damaged.

GENERAL VIEW AND DESCRIPTION OF PARTS

VACUUM ADJUSTED MODEL


VACUUM UNADJUSTED MODEL

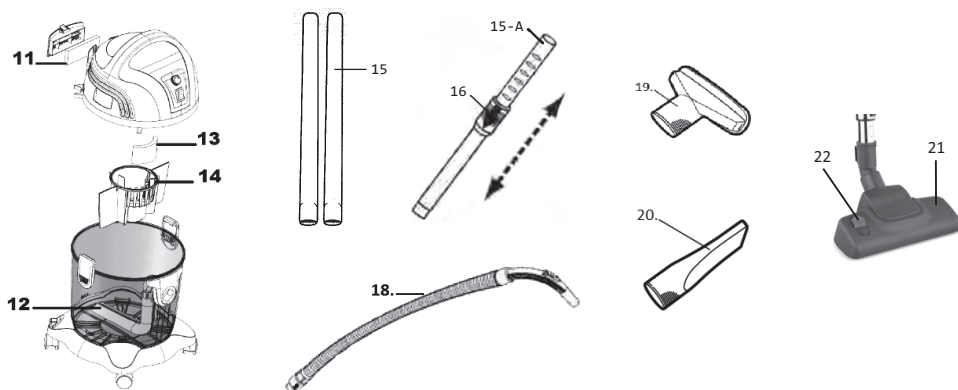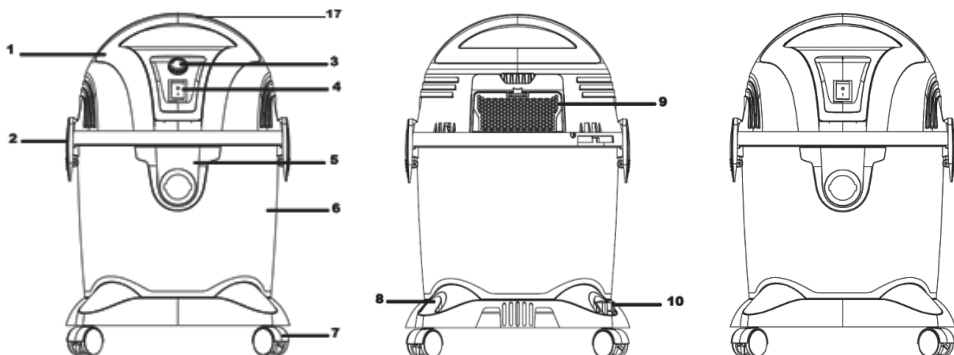

1. Motor body
2. Pins
3. Suction power adjustment button (only for vacuum adjusted model)
4. On/Off button
5. Hose end inlet
6. Dust container
7. Wheel
8. Telescopic tube fixing slot
9. Exhaust filter cover
10. Vertical parking position slot
11. Exhaust filter sponge


12. L pipe
13. Indoor unit sponge filter
14. Indoor unit
15. Plastic Pipe
- 15-A. Telescopic Tube (Optional)
16. Telescopic Tube Adjuster (Optional)
17. Handle
18. Hose
19. Seat - sofa apparatus
20. Edge - corner device
21. Sweeper head
22. Sweeper floor change setting

 USE OF THE PRODUCT

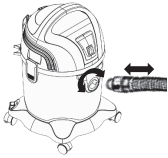


Attaching the Hose

 1. Push the end from the hose into the hose inlet hole and lock it by turning it to the right.
2. Turn the end of the hose to the left and pull it back out.

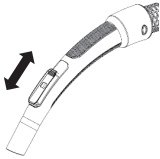

Handle Vacuum Power Adjustment

 1. The vacuum power is adjusted from the vacuum power adjuster:
 - Vacuum power adjuster is opened, low vacuum power.
 - Vacuum power adjuster is closed, high vacuum power.



Handle and Telescopic Pipe Joining

1. Engage the handle and telescopic tube and lock by pressing firmly.



Plastic Pipe

1. Insert and join the plastic pipes together.
2. Engage the handle and the plastic tube and lock by pressing firmly.



 
Telescopic Tube Adjuster

1. Press the telescopic tube adjustment button and adjust the telescopic tube to the desired length.









Telescopic Tube and Apparatus Joining

- 1- Engage the sweeper head, seat - sofa, edge - corner apparatus and telescoping tube, and lock them by pressing firmly.
- 2- Edge - corner apparatus: For corners, joints and heating radiators etc.
- 3- Seat-sofa apparatus: For protective cleaning of your seats and sensitive objects, dusting your cushions, etc.

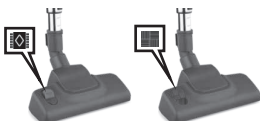

Sweeper Floor Change Adjustment

      - 1- Carpets and carpet flooring
- 2- Hard Floors

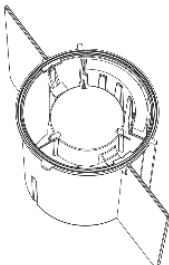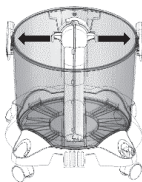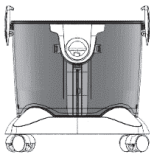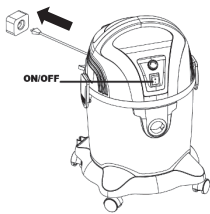

Use of Device

1. Open by pulling the latches of the top head and set the top head aside.
2. Put water into the water tank of the device up to the MAX level.

NOTE: The water level should never exceed the "MAX" mark on the tank.

CAUTION: NEVER run your vacuum cleaner without adding water.

Hint: If the water is very dirty, empty and clean the water tank according to the instructions and fill it with water again.

3. Replace the top head and lock the latches.
4. Insert the power plug into the power outlet.
5. To turn on the device, press the on/off button on the top of the device.
6. To turn off the device, press the on/off button on the top of the device.

Wet Use

1. Open the side latches on the device and lift the motor body from the body by holding the handle.
 2. The sponge filter must be installed correctly.
 3. Remove the L pipe by unlatching it.
- NOTE:** The sponge filter must be attached when vacuuming liquid.
4. Put the motor body back and lock the latch.
 5. Plug in the apparatus you want to use and start the device.
 6. After the wet vacuum, clean and dry the inside of the device and the accessories. Then install the desired filters.

CAUTION: If the float is activated prematurely while vacuuming the liquid (due to excessive foam), turn off the device and unplug it before cleaning.

 
Float

1. When the water tank of the device is full, the float will be activated and the device will turn off.
2. Pause the cleaning process.
3. Turn off the device and pull out the plug from the socket.
4. Take the device to the drain and empty the liquid in the water tank.

NOTE: If the device falls over during vacuuming, the float will turn off the device.

5. Turn off the device immediately.
6. Return the device to the upright position.
7. Wait until the motor comes to a complete stop and the float returns to its normal state.
8. Turn on the appliance and continue vacuuming.

Vacuum Power Adjustment (for Vacuum Adjusted Model)

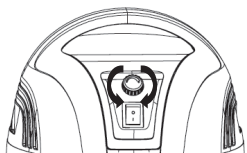

1- You can adjust the suction power with the selection button on the device during the sweeping process.

- Use maximum suction power to vacuum very dirty carpets and hard floors.
- Use minimum suction power to clean curtains, tablecloths, etc.

 
Emptying the Dustbin

1. Pull the latches of the top head open and set the top head aside.

2. Empty the waste water in the chamber.

Hint: We recommend that you clean the dust bin and filter each time you empty the dust bin. It can create a bad smell.

3. Put the top head in place and lock the latches.

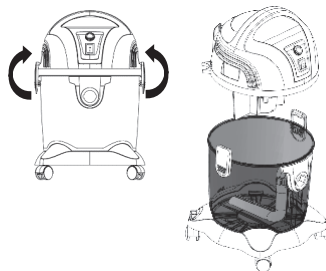


Motor Protection Filter

1. To separate the slot of the motor protection filter, open the indoor unit by turning it to the left.

2. To clean, shake the filter over a trash can.

3. Insert the clean filter into the filter holder.

 4. Lock the indoor unit by turning it to the right.

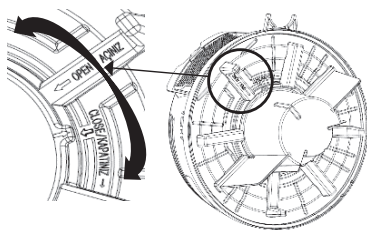


Blowing Feature

1. To use the blowing feature, attach the hose end to the top of your machine and lock it by turning it to the right.

2. Turn on your machine from the on/off switch.

 3. To remove the hose end, pull it by turning it to the left.

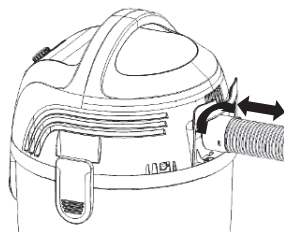

Exhaust Filter Cleaning

 
1. Open and remove the filter cover by pressing the exhaust filter cover release latch.

2. Remove the sponge filter.

3. To clean, shake the filter over a trash can.

4. Insert the clean filter into the filter holder.

5. Close the filter cover.

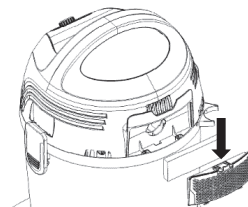



SRB

SL 402

SL 405

UPUTSTVO ZA UPOTREBU USISIVAČ SA VODENIM FILTEROM



Pre prve upotrebe uređaja, najpre pročitajte ovo uputstvo za upotrebu i prateća bezbednosna upozorenja. Postupajte u skladu sa uputstvom. Sačuvajte svako uputstvo za upotrebu za kasniju upotrebu ili za prosljeđivanje budućim korisnicima uređaja.

Opšte informacije

Pravilna upotreba

Ovaj usisivač je napravljen za upotrebu u privatnom domaćinstvu, a ne za komercijalnu upotrebu. Proizvođač ne preuzima nikakvu odgovornost za štetu uzrokovanu nepravilnom ili pogrešnom upotrebom. Koristite usisivač samo sa originalnim rezervnim delovima, priborom ili posebnim priborom.

Odlaganje filtera za prašinu

Filteri za prašinu su napravljeni od ekološki prihvatljivih materijala. Ovi predmeti se mogu odlagati uz uobičajeni kućni otpad, sve dok ne sadrže apsorbovane supstance koje su zabranjene za kućni otpad.

Rezervni delovi

Koristite samo originalni pribor i originalne rezervne delove. Na ovaj način garantujete bezbedan i nesmetan rad uređaja.

Za informacije o dodacima i rezervnim delovima, obratite se svom ovlašćenom prodavcu ili servisu.

Obim isporuke

Obim isporuke vašeg uređaja je prikazan na njegovom pakovanju. Kada se pakovanje otvori, proverite da li unutra ima delova koji nedostaju.

Obavestite svog prodavca ako dodatna oprema nedostaje ili je oštećena u transportu.

UPOZORENJA

- Ovaj uređaj mogu da koriste deca uzrasta od 8 godina i više i osobe sa smanjenim fizičkim, senzornim ili mentalnim sposobnostima ili sa nedostatkom iskustva i znanja ako su pod nadzorom ili su dobili instrukcije u vezi sa korišćenjem uređaja na bezbedan način i razumeju uključene opasnosti. Aparat ne treba da čiste i održavaju deca bez nadzora.
- Čuvajte folije za pakovanje dalje od dece.
- Decu mlađu od 3 godine treba držati dalje od uređaja osim ako su pod stalnim nadzorom.
- Uređaji ne bi trebalo da se koriste za igranje.
- Deca starija od 3 godine i mlađa od 8 godina ne bi trebalo da priključuju uređaj u električnu utičnicu, ne bi trebalo da podešavaju uređaj i ne bi trebalo da preduzimaju nikakve radnje u vezi sa čišćenjem i održavanjem uređaja.
- Uređaj ne sme da se koristi bez nadzora.

BEZBEDNOSNA UPOZORENJA!

- Kada koristite električni uređaj, uvek treba da preduzmete mere predostrožnosti da sprečite požar, strujni udar i telesne povrede.
- Pažljivo pročitajte informacije date u uputstvima za upotrebu. Sačuvajte uputstva za upotrebu. Ako ćete uređaj dati trećoj strani, obavezno dajte uputstvo uz njega.
- Zaštitne kese uređaja, pribora i aparata držite dalje od dece i beba kako biste sprečili rizik od gušenja.
- Ako mislite da postoji bilo kakav problem na uređaju, kućištu, kablu, utikaču i sličnim delovima, nemojte da koristite uređaj. Obratite se najbližem ovlašćenom servisu.
- Ako je uređaj neispravan, trebalo bi da ga popravi ovlašćeni servis. Nikada ga ne popravljajte sami.

- Pošto se uređaj napaja električnom energijom, postoji opasnost od strujnog udara, zato nikada ne dodirujte utikač mokrim rukama.
- Kada želite da izvučete utikač iz utičnice, obavezno povucite utikač držeći ga.
- Ne pokušavajte da vučete držeći kabl za napajanje, to može oštetiti kabl.
- Vodite računa da ne oštetite kabl za napajanje i da ne dođete u kontakt sa izvorom toplote ili oštrim tačkama.
- Ne koristite na otvorenom. Prljavština ili kiša mogu negativno da utiču na uređaj.
- Nikada ne uranjajte mašinu u vodu i zaštitite je od kiše ili vlage.
- Uverite se da koristite uređaj u opsegu napona koji je napisan na uređaju.
- Nikada ne ostavljajte uređaj bez nadzora dok je uključen. Ne dozvolite deci da se igraju sa uređajem bez vašeg nadzora.
- Uvek koristite svoj uređaj u bezbednoj utičnici.
- Uverite se da utikač nije u utičnici kada priključujete ili uklanjate pribor, ili kada čistite i održavate uređaj.
- Nemojte koristiti uređaj sa produžnim kablom.
- Da biste sprečili oštećenje kabla za napajanje, nemojte ga pritiskati, savijati ili trljati o oštre ivice.
- Nemojte da držite cev, crevo ili bilo koji drugi pribor uređaja u očima ili ušima niti ga stavljati u usta.

Rešavanje problema

Pre nego što pošaljete proizvod ovlašćenom servisu, možete koristiti tabelu ispod da biste rešili probleme.

UPOZORENJE!

Pre nego što počnete da rešavate problem, isključite uređaj i izvucite mrežni utikač. Nikada ne koristite oštećeni proizvod.

Problem	Mogući uzrok	Rešenje
Kada uređaj ne radi	Uređaj nije uključen ili nije pokrenut.	Uključite i pokrenite uređaj.
	Ne postoji struja koja teče kroz utičnicu.	Povežite usisivač u drugu utičnicu za koju ste sigurni da je ispravna.
	Kabl je oštećen.	Zamenite kabl u Ovlašćenom servisu.
Kada uređaj ne čisti	Posuda za prašinu je puna.	Ispraznite posudu za prašinu.
	Izabrani čistač nije pogodan za datu površinu.	Zamenite dodatak za čišćenje onim pogodnim za datu površinu.
	Filter je prljav.	Očistite filter. Uverite se da je platneni filter čist.
	Crevo, vakuumska cev ili dodatak je začepljen.	Očistite blokadu. Za ovo možete koristiti dugački štap ako je potrebno.
Ako uređaj pravi veliku buku tokom rada	Usisani predmeti mogu blokirati usisne puteve.	Uklonite blokadu uklanjanjem predmeta. Za ovo možete koristiti dugački štap ako je potrebno.
Prisutno je curenje tečnosti ili pene.	Isključite uređaj.	Ispraznite posudu za prašinu i, ako je potrebno, koristite sredstvo protiv pene. Pre pokretanja uređaja, proverite da li plovak radi ili ne.



Ako je posuda za prašinu puna, obavezno je ispraznite.

Važno upozorenje!

Kada se uređaj pregreje, isključite uređaj i izvucite mrežni utikač. Uverite se da čistač poda, teleskopska usisna cev ili usisno crevo nisu začepljeni ili da filter ne treba menjati. Nakon otklanjanja kvara, ohladite uređaj najmanje 1 sat, nakon čega je uređaj ponovo spreman za rad.

ZAŠTITA ŽIVOTNE SREDINE



Materijali za pakovanje mogu da se recikliraju. Molimo pošaljite materijale za pakovanje na mesta za višekratnu upotrebu umesto da ih bacate u kućni otpad.



Stari uređaji sadrže vredne materijale za reciklažu koje je potrebno reciklirati. Iz tog razloga, molimo vas da odložite korišćenu robu koristeći za to predviđene sisteme za prikupljanje.

Električna i elektronska oprema često sadrži komponente koje mogu biti opasne po ljudsko zdravlje i životnu sredinu ako se pogrešno koriste ili odlažu na pogrešan način. Ove komponente moraju biti prisutne da bi uređaj ispravno funkcionisao. Uređaji označeni ovim simbolom ne smeju da se odlagažu sa kućnim otpadom.

PREPORUKE ZA UPOTREBU

- Nikada ne koristite uređaj bez filtera. Ovo može da izazove oštećenje motora i da smanji životni vek uređaja.
- Uvek čistite sve delove kako je prikazano u uputstvima za upotrebu. Ne čistite nijedan deo vodom i/ili sredstvima za čišćenje osim ako je to izričito naznačeno u uputstvima za upotrebu.
 - Usisivač nije pogodan za:
 - Usisavanje ljudi i životinja.
 - Čišćenje sledećeg:
 - Mala stvorenja (npr. insekti, pauci, itd.)
 - Supstance koje su opasne po zdravlje, imaju oštre ivice, vruće su ili zapaljene.
 - Vlažne ili tečne supstance
 - Lako zapaljive ili eksplozivne supstance i gasovi.

 
 
PAŽNJA!

- Ako čistite filtere uređaja koji se mogu prati vodom, uverite se da su potpuno suvi pre nego što ih vratite u uređaj.
- Nemojte sušiti filter na direktnoj sunčevoj svetlosti, na radijatoru ili u mašini za sušenje veša. Zamenite perivi filter kada ne može da se pravilno očisti ili je oštećen.

IZGLED UREĐAJA I OPIS DELOVA


MODEL SA PODESIVOM SNAGOM USISAVANJA

MODEL BEZ PODEŠAVANJA USISAVANJA

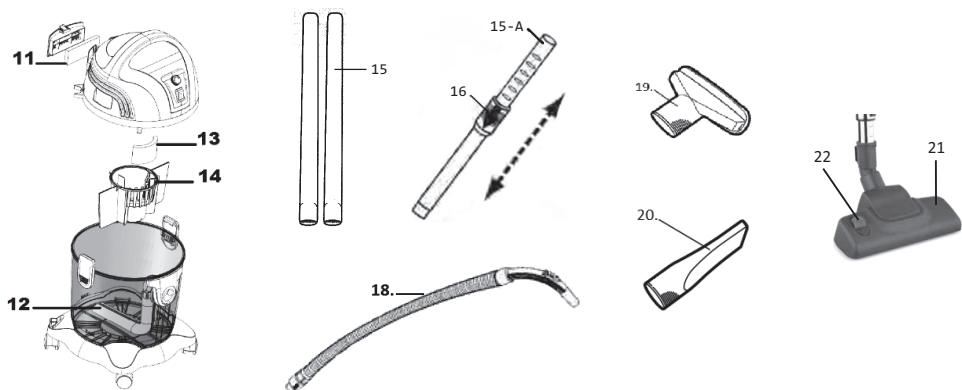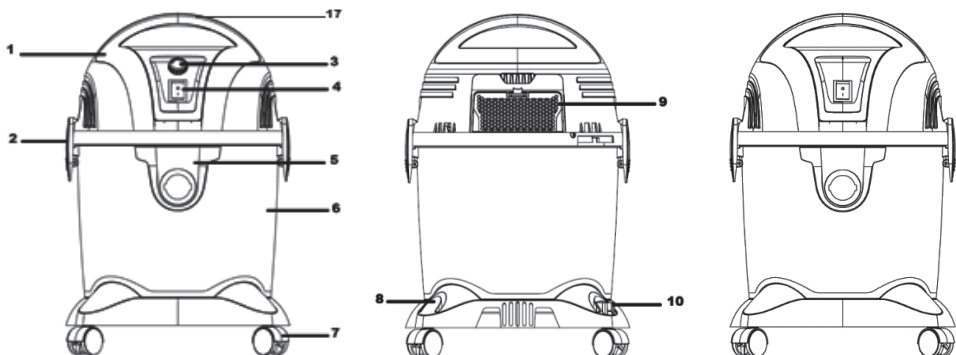


- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Telo motora 2. Pribadače 3. Dugme za podešavanje snage usisavanja (samo za model sa podešavanjem snage usisavanja) 4. Dugme za uključivanje/isključivanje 5. Ulaz na kraju creva 6. Posuda za prašinu 7. Točak 8. Prorez za pričvršćivanje teleskopske cevi 9. Poklopac izduvnog filtera 10. Prorez za vertikalni parking položaj 11. Sunder izduvnog filtera | <ol style="list-style-type: none"> 12. L cev 13. Sunder filter unutrašnje jedinice 14. Unutrašnja jedinica 15. Plastična cev
15-A. Teleskopska cev (opciono) 16. Teleskopska cev za podešavanje (opciono) 17. Ručka 18. Crevo 19. Dodatak za sedište - sofe 20. Dodatak za ivice - čoškove 21. Glava za čistača 22. Podešavanje promene poda čistača |
|--|---|

 UPOTREBA PROIZVODA

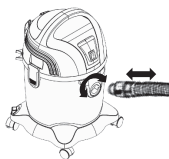

Pričvrščivanje creva

 1. Gurnite kraj creva u ulazni otvor creva i zaključajte ga okretanjem udesno.
2. Okrenite kraj creva ulevo i izvucite ga nazad.

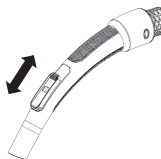

Podešavanje snage usisavanja

1. Snaga usisavanja se podešava pomoću regulatora usisne snage:
 - Regulator snage usisavanja je otvoren, niska usisna snaga.
 - Regulator snage usisavanja je zatvoren, velika usisna snaga.



Spajanje ručke i teleskopskih cevi

1. Spojite ručicu i teleskopsku cev i zaključajte čvrstim pritiskom.



Plastična cev

1. Umetnite i spojite plastične cevi zajedno.
2. Spojite ručicu i plastičnu cev i zaključajte čvrstim pritiskom.

 


Teleskopska cev za podešavanje

1. Pritisnite dugme za podešavanje teleskopske cevi i podesite teleskopsku cev na željenu dužinu.







Spajanje teleskopske cevi i dodatka

- 1- Spojite glavu čistača, dodatak za sedišta - sofe, dodatak za iverice - čoškove i teleskopsku cev i zaključajte ih čvrstim pritiskom.
- 2- Dodatak za iverice - čoškove: Za čoškove, spojeve i radijatore za grejanje itd.
- 3- Dodatak za sedišta - sofe: Za zaštitno čišćenje vaših sedišta i osetljivih predmeta, brisanje prašine sa jastuka itd.

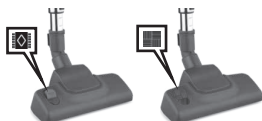

Podešavanje promene poda čistača

      - 1- Tepisi i podne obloge
- 2- Tvrdi podovi

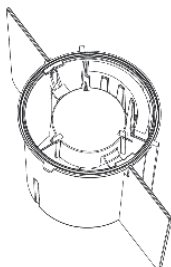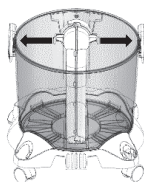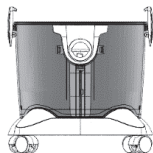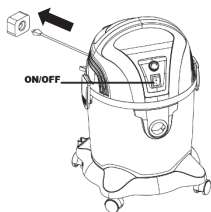

Korišćenje uređaja

1. Otvorite povlačenjem reze gornje glave i ostavite gornju glavu u stranu.
2. Stavite vodu u rezervoar za vodu uređaja do nivoa MAX.
NAPOMENA: Nivo vode nikada ne bi trebalo da prelazi oznaku "MAX" na rezervoaru.
- OPREZ:** NIKADA nemojte pokretati usisivač bez dodavanja vode.
- Savet:** Ako je voda veoma prljava, ispraznite i očistite rezervoar za vodu prema uputstvima i ponovo ga napunite vodom.
3. Vratite gornju glavu i zaključajte reze.
4. Utaknite utikač u zidnu utičnicu.
5. Da biste uključili uređaj, pritisnite dugme za uključivanje/isključivanje na vrhu uređaja.
6. Da biste isključili uređaj, pritisnite dugme za uključivanje/isključivanje na vrhu uređaja.

Mokro usisavanje

 
1. Otvorite bočne reze na uređaju i podignite telo motora sa kućišta držeći ručku.
2. Sunde filter mora biti pravilno postavljen.
3. Uklonite L cev tako što ćete je otključati.
NAPOMENA: Sunde filter mora biti pričvršćen kada usisavate tečnost.
4. Vratite telo motora nazad i zaključajte rezu.
5. Uključite aparat koji želite da koristite i pokrenite uređaj.
6. Nakon mokrog usisavanja, očistite i osušite unutrašnjost uređaj i pribor. Zatim postavite željene filtere.

OPREZ: Ako se plovak aktivira pre vremena tokom usisavanja tečnosti (zbog prevelike pene), isključite uređaj i isključite iz zidne utičnice pre čišćenja.

Plovak

1. Kada se rezervoar za vodu uređaja napuni, plovak će se aktivirati i uređaj će se isključiti.
2. Pauzirajte proces čišćenja.
3. Isključite uređaj i izvucite utikač iz utičnice.
4. Odnosite uređaj u odvod i ispraznite tečnost iz rezervoara za vodu.
NAPOMENA: Ako se uređaj prevrne tokom usisavanja, plovak će isključiti uređaj.
5. Odmah isključite uređaj.
6. Vratite uređaj u uspravan položaj.
7. Sačekajte dok se motor potpuno ne zaustavi i dok se plovak vrati u normalno stanje.
8. Uključite aparat i nastavite da usisavate.

Podešavanje snage usisavanja (za model sa podešavanjem usisne snage)

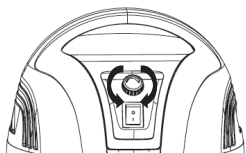

1- Možete podesiti snagu usisavanja pomoću dugmeta za izbor na uređaju tokom procesa čišćenja.

- Koristite maksimalnu snagu usisavanja za usisavanje veoma prljavih tepiha i tvrdih podova.
- Koristite minimalnu snagu usisavanja za čišćenje zavesa, stolnjaka itd.

 
Pražnjenje posude za prašinu

1. Povucite reze gornje glave i ostavite gornju glavu na stranu.

2. Ispraznite otpadnu vodu u komori.

Savet: Preporučujemo da očistite kantu za prašinu i filter svaki put kada ispraznite posudu za prašinu. Može se stvoriti loš miris.

3. Postavite gornju glavu na mesto i zaključajte reze.

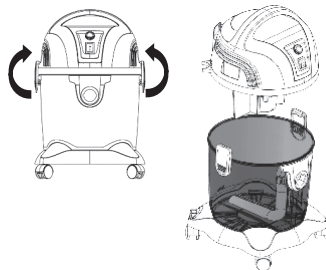


Filter za zaštitu motora

1. Da biste odvojili otvor filtera za zaštitu motora, otvorite unutrašnju jedinicu okretanjem nalevo.

2. Da biste očistili, protresite filter preko kante za smeće.

3. Umetnite čisti filter u držač filtera.

 4. Zaključajte unutrašnju jedinicu okretanjem udesno.

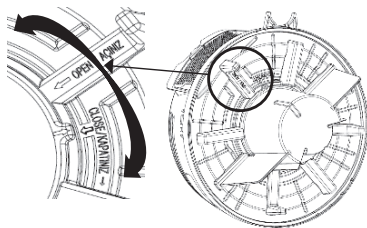


Funkcija duvanja

1. Da biste koristili funkciju duvanja, pričvrstite kraj creva na vrh vašeg uređaja i zaključajte ga okretanjem udesno.

2. Uključite svoj uređaj pomoću prekidača za uključivanje/isključivanje.

 3. Da biste uklonili kraj creva, povucite ga okretanjem ulevo.

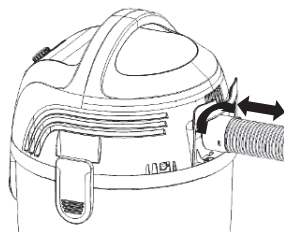

Čišćenje izduvnog filtera

1. Otvorite i uklonite poklopac filtera pritiskom na rezu za otpuštanje poklopcu izduvnog filtera.

2. Uklonite sunder filter.

3. Da biste očistili, protresite filter preko kante za smeće.

4. Umetnite čisti filter u držač filtera.

5. Zatvorite poklopac filtera.

